

# Transmission Media

## ITS323: Introduction to Data Communications

Sirindhorn International Institute of Technology  
Thammasat University

Prepared by Steven Gordon on 23 May 2012

ITS323Y12S1L04, Steve/Courses/2012/s1/its323/lectures/media.tex, r2334

# Contents

Design Factors

Guided Media

Wireless  
Transmission

Wireless Media

Design Factors

Guided Media


Wireless Transmission

Wireless Media

# Design Factors

- ▶ Key concerns are data rate and distance: maximise both
- ▶ Design factors:
  - ▶ Bandwidth
  - ▶ Transmission impairments
  - ▶ Interference
  - ▶ Number of receivers

# Electromagnetic Spectrum for Telecommunications

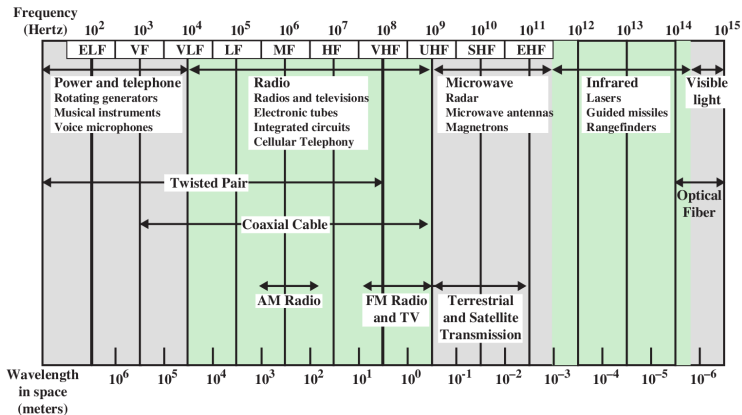

# Contents

Design Factors

**Guided Media**

Wireless  
Transmission

Wireless Media

Design Factors

**Guided Media**

Wireless Transmission

Wireless Media

# Electrical Cables

- ▶ Transmit electrical signals on a conductor, e.g. copper
- ▶ Cable carrying electrical current radiates energy, and can pick-up energy from other sources
  - ▶ Can cause interference on other cables
  - ▶ Other sources can cause interference on the cable
  - ▶ Interference results in poor quality signals being received
- ▶ To minimise interference:
  - ▶ Keep the cable lengths short
  - ▶ Keep the cables away from other sources
  - ▶ Design the cables to minimise radiation and pick-up
    - ▶ Use materials to shield from interference
    - ▶ Organise multiple wires so they don't interfere with each other

# Twisted Pair

- ▶ Two insulated copper wires arranged in spiral pattern
- ▶ Most commonly used and least expensive medium
  - ▶ Used in telephone networks and in-building communications
  - ▶ Telephone networks designed for analog signalling (but supporting digital data)
  - ▶ Also used for digital signalling
- ▶ Two varieties of twisted pair: shielded (STP) and unshielded (UTP); also multiple categories (CAT5)


- Separately insulated
- Twisted together
- Often "bundled" into cables
- Usually installed in building during construction



(a) Twisted pair

# Coaxial Cable

- ▶ Two conductors, one inside the other
- ▶ Provide much more shielding from interference than twisted pair: Higher data rates; More devices on a shared line; Longer distances
- ▶ Widely used for cable TV, as well as other audio/video cabling
- ▶ Used in long-distance telecommunications, although optical fibre is more relevant now

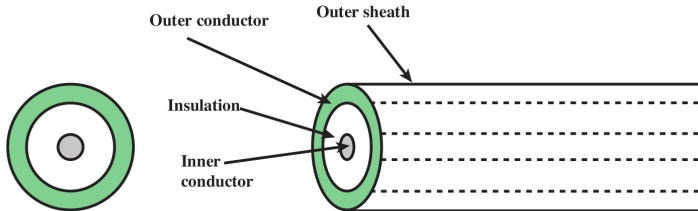


- Outer conductor is braided shield
- Inner conductor is solid metal
- Separated by insulating material
- Covered by padding



# Optical Fibre

- ▶ Light (optical rays) is guided within glass or plastic fibres
- ▶ Used in long-distance telecommunications, as well as telephone systems, LANs, and city-wide networks
- ▶ Advantages of optical fibre over electrical cables:
  1. Lower loss: can transfer larger distances
  2. Higher bandwidth: a single fibre is equivalent to 10's or 100's of electrical cables
  3. Small size, light weight: lowers cost of installation
  4. Electromagnetic isolation

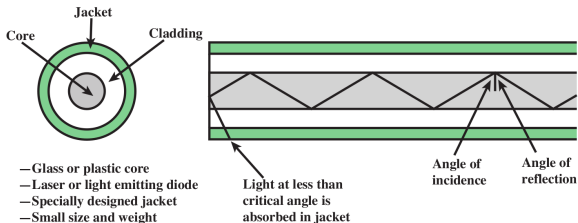

(c) Optical fiber

# Comparison of Guided Media

## Electrical Cables

- ▶ Moderate data rates: 1Gb/s
- ▶ Maximum distance: 2km (twisted pair); 10km (coaxial)
- ▶ Cheapest for low data rates
- ▶ UTP: easy to install, susceptible to interference
- ▶ STP, Coaxial Cable: rigid, protection against interference

## Optical Cables

- ▶ Very high data rates: 100Gb/s+
- ▶ Maximum distance: 40km
- ▶ Expensive equipment, but cost effective for high data rates
- ▶ Difficult to install

# Point-to-Point Transmission Characteristics of Guided Media

Design Factors


Guided Media

Wireless  
Transmission


Wireless Media

	<b>Frequency Range</b>	<b>Typical Attenuation</b>	<b>Typical Delay</b>	<b>Repeater Spacing</b>
Twisted pair (with loading)	0 to 3.5 kHz	0.2 dB/km @ 1 kHz	50 $\mu$ s/km	2 km
Twisted pairs (multipair cables)	0 to 1 MHz	0.7 dB/km @ 1 kHz	5 $\mu$ s/km	2 km
Coaxial cable	0 to 500 MHz	7 dB/km @ 10 MHz	4 $\mu$ s/km	1 to 9 km
Optical fiber	186 to 370 THz	0.2 to 0.5 dB/km	5 $\mu$ s/km	40 km


# Attenuation of Typical Guided Media

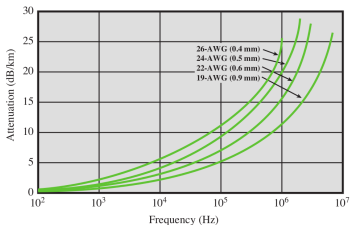


(a) Twisted pair (based on [REEV95])

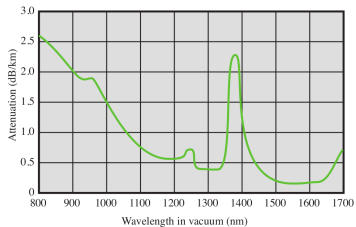

(c) Optical fiber (based on [FREE02])

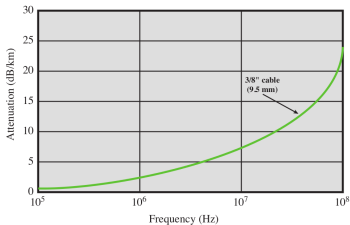

(b) Coaxial cable (based on [BELL90])

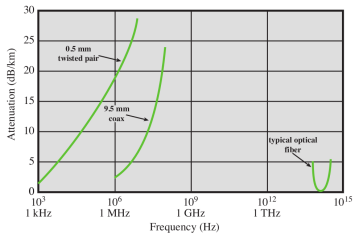

(d) Composite graph

# Contents

Design Factors

Guided Media


Wireless Transmission

Wireless Media

# Wireless Transmission Model

Common wireless systems for communications include:

- ▶ Terrestrial microwave, e.g. television transmission
- ▶ Satellite microwave, e.g. IPstar
- ▶ Broadcast radio, e.g. IEEE 802.11 WiFi (wireless LAN)
- ▶ Infrared, e.g. in-home communications

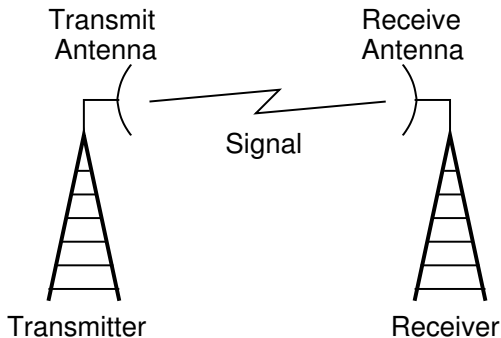

# Antennas


- ▶ Antenna converts between electrical current and electromagnetic waves
- ▶ Waves are within the Radio Frequency (RF) band of 3 kHz to 300 GHz
- ▶ Antenna characteristics are same whether sending or receiving
- ▶ Direction and propagation of a wave depends on antenna shape
- ▶ **Isotropic antenna**: power propagates in all directions equally (spherical pattern, ideal)
- ▶ **Omni-directional antenna**: power propagates in all directions on one plane (donut)
- ▶ **Directional antenna**: power concentrated in particular direction
- ▶ Power output in particular direction compared to power produced by isotropic antenna is **antenna gain** [dBi]

# Antenna Examples


See <http://www.cisco.com/en/US/products/hw/wireless/ps469/>



# Parabolic Reflective Antenna

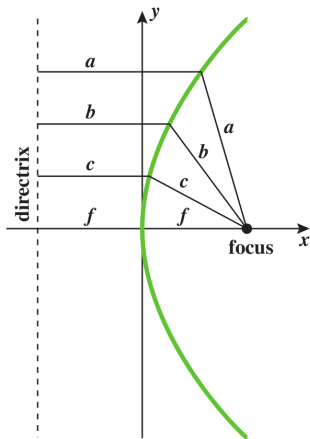

(a) Parabola

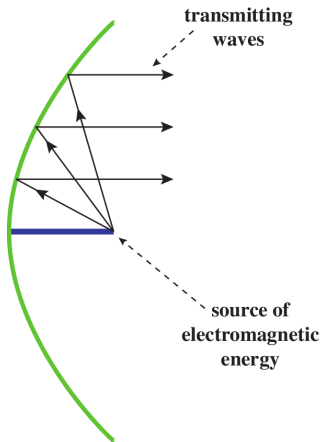

(b) Cross-section of parabolic antenna showing reflective property

# Calculating Antenna Gain

- ▶ Relationship between **effective area** of antenna and its gain:

$$G = \frac{4\pi A_e}{\lambda^2}$$


where  $\lambda$  is signal carrier wavelength

- ▶ Effective area is related to physical size, but differs among antenna designs
- ▶ E.g. parabolic antenna may have effective area of  $0.5 \times$  physical area


# Wireless Propagation

- ▶ Ground Wave Propagation (below 2 MHz): signal follows contour of Earth, e.g. AM radio
- ▶ Sky Wave Propagation (2–30 MHz: signal reflected between ionosphere and Earth, e.g. amateur radio, international radio stations
- ▶ Line-of-Sight Propagation (above 30 MHz): signal not reflected; antennas must be in effective line-of-sight; used for most communications


# Different Propagation Characteristics

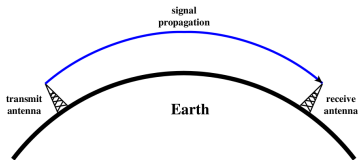

(a) Ground-wave propagation (below 2 MHz)

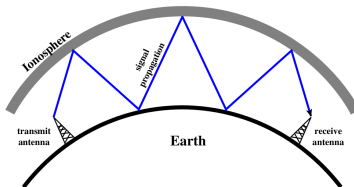

(b) Sky-wave propagation (2 to 30 MHz)

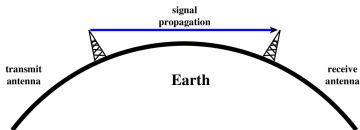

(c) Line-of-sight (LOS) propagation (above 30 MHz)

# Frequency Bands

Design Factors

Guided Media

Wireless  
Transmission

Wireless Media

Band	Frequency Range	Free-Space Wavelength Range	Propagation Characteristics	Typical Use
ELF (extremely low frequency)	30 to 300 Hz	10,000 to 1000 km	GW	Power line frequencies; used by some home control systems.
VF (voice frequency)	300 to 3000 Hz	1000 to 100 km	GW	Used by the telephone system for analog subscriber lines.
VLF (very low frequency)	3 to 30 kHz	100 to 10 km	GW; low attenuation day and night; high atmospheric noise level	Long-range navigation; submarine communication
LF (low frequency)	30 to 300 kHz	10 to 1 km	GW; slightly less reliable than VLF; absorption in daytime	Long-range navigation; marine communication radio beacons
MF (medium frequency)	300 to 3000 kHz	1,000 to 100 m	GW and night SW; attenuation low at night, high in day; atmospheric noise	Maritime radio; direction finding; AM broadcasting.
HF (high frequency)	3 to 30 MHz	100 to 10 m	SW; quality varies with time of day, season, and frequency.	Amateur radio; military communication
VHF (very high frequency)	30 to 300 MHz	10 to 1 m	LOS; scattering because of temperature inversion; cosmic noise	VHF television; FM broadcast and two-way radio, AM aircraft communication; aircraft navigational aids
UHF (ultra high frequency)	300 to 3000 MHz	100 to 10 cm	LOS; cosmic noise	UHF television; cellular telephone; radar; microwave links; personal communications systems
SHF (super high frequency)	3 to 30 GHz	10 to 1 cm	LOS; rainfall attenuation above 10 GHz; atmospheric attenuation due to oxygen and water vapor	Satellite communication; radar; terrestrial microwave links; wireless local loop
EHF (extremely high frequency)	30 to 300 GHz	10 to 1 mm	LOS; atmospheric attenuation due to oxygen and water vapor	Experimental; wireless local loop; radio astronomy
Infrared	300 GHz to 400 THz	1 mm to 770 nm	LOS	Infrared LANs; consumer electronic applications
Visible light	400 THz to 900 THz	770 nm to 330 nm	LOS	Optical communication

# Wireless Transmission Impairments


**Free Space Loss:** Signal disperses with distance; therefore signal attenuates over distance

**Atmospheric Absorption:** Water vapour and oxygen in atmosphere may attenuate signals; only significant for specific frequencies (e.g. 22GHz, > 30 GHz)


**Multipath:** Signals reflect off obstacles; multiple copies of signal arrive at receiver with varying delays causing reinforcement or cancellation

**Refraction:** Signals are refracted through atmosphere; only part of wave received

# Examples of Multipath Interference



(a) Microwave line of sight

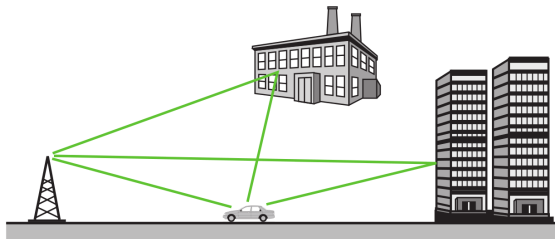

(b) Mobile radio

# Free Space Loss Model

- ▶ Ideal model to determine amount of power loss between transmitter and receiver

$$\frac{P_t}{P_r} = \frac{(4\pi d)^2}{G_t G_r \lambda^2}$$

- ▶ Assumes no obstacles, operating in vacuum and perfect antennas
- ▶ Other models: Okumura-Hata (urban, suburban); Longley-Rice (TV broadcast); Log-distance (indoor)



## Example of Path Loss

Two parabolic antennas with diameter 1 metre; frequency 5 GHz; transmit power 1 W; distance 1 km. What is required receive power threshold of receiver?

# Contents

Design Factors

Guided Media

Wireless  
Transmission

Wireless Media

Design Factors

Guided Media

Wireless Transmission

Wireless Media

## Terrestrial Microwave


- ▶ Parabolic antenna (usually 1-3 m) used to transmit point-to-point to another antenna
- ▶ Line-of-sight communications; often antennas are placed high (towers, buildings) to avoid obstacles
- ▶ Long-distance telecommunications (alternative to optical fibre, coaxial cable), e.g. voice and TV transmission
- ▶ Short communications between buildings (e.g. office buildings in city)
- ▶ Mobile telephone systems (GSM, CDMA, 3G)

Band (GHz)	Bandwidth (MHz)	Data Rate (Mbps)
2	7	12
6	30	90
11	40	135
18	220	274


# Satellite Microwave

- ▶ Communications satellite acts as microwave relay station
- ▶ Links two or more ground/earth stations
- ▶ Receives signal on one frequency (uplink), repeats or amplifies, and transmits on another frequency (downlink)
- ▶ Point-to-point or broadcast configuration
- ▶ Geostationary Orbit (GEO): satellite appears stationary from Earth; cover about  $\frac{1}{3}$  Earth surface; 36,000 km above Earth
- ▶ Low Earth Orbit (LEO): 100's of km above Earth; orbit Earth every 1–2 hours; footprint with radius of 3000–4000 km

# Satellite Communication Configurations: Point-to-point link

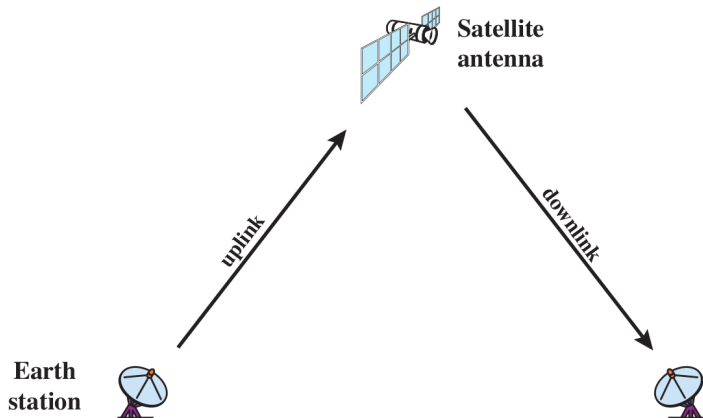


# Satellite Communication Configurations: Broadcast link

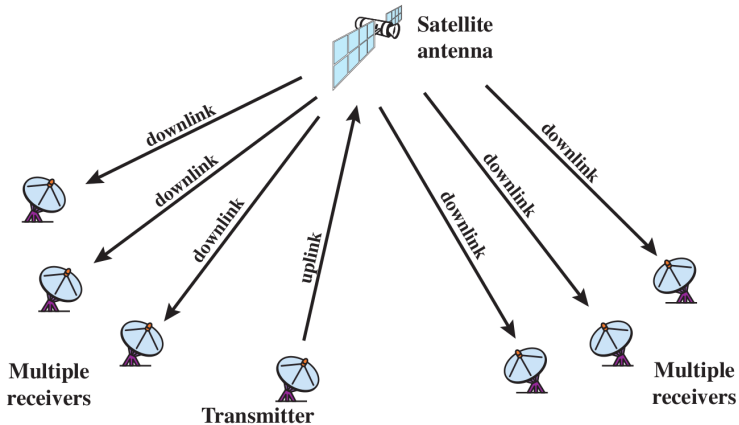

# Applications for Satellites

- ▶ TV distribution
- ▶ Long-distance telephone transmission
- ▶ Private business networks
  - ▶ Very Small Aperture Terminals (VSATs) allow for low cost Earth stations
- ▶ Global positioning, e.g. GPS

# Typical VSAT Configuration

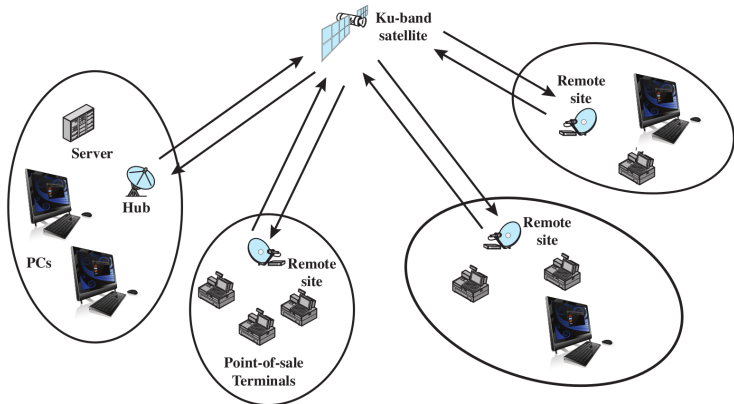



## Example of Satellite Technology

See <http://www.ipstar.com/> (especially the PDF specifications of the satellite and terminals)

# Broadcast Radio

- ▶ Microwave uses directional antennas; broadcast radio can use omni-directional
- ▶ Frequencies from 30 MHz to 1 GHz
- ▶ FM radio
- ▶ UHF and VHF television
- ▶ Wireless networking